
DISPENSER USER MANUAL

MODEL WR-PXQ488A

Thank you for purchasing this auto perfume dispenser, which adopts CPU and LCD display technology, with reliable function, accurate timing and low power. The LCD shows the working status directly which makes it more convenient to users. The spraying interval and spraying time can be changed according to the size of space, density of population, and air condition. It is an ideal choice for both commercial and home use.


Components:


- 1.Cover
- 2. Mounting hole
- 3.Base
- 4. Tin Clamp
- 5.Key
- 6.MODE
- 7.+/SET
- 8.CONFIRM
- 9.SPRAY
- 10.POWER
- 11.Batteries
- 12.Batteries cover buckle
- 13.Batteries cover

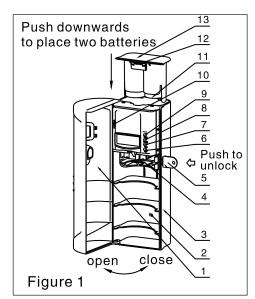


Installation:

- 1. Use the key attached to unlock the cover, and follow the direction in (Figure 1) to open it.
- 2. To wall mount as shown in (Figure 3), drill 2 holes of 6mm diameter 30mm deep, and fix the hanger with the plugs and screws. Fit the dispenser right to the hanger, and fix it with the screw (Figure 4).
- 3. Installing the aromatic spray, fit the back of the nozzle from the spray right to the spout location, place the bottleneck to the groove, and press the aromatic spray into position.
- 4. Place 2 pieces of 1.5V20R batteries (not supplied) into the base (Figure 2).
- 5. The dispenser should be installed at a height that can not spray to people directly.

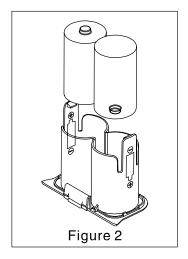

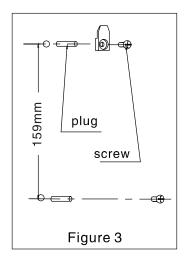


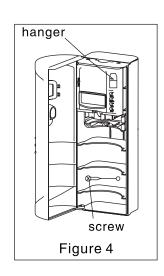


Application:


- 1. Functions:
 - a. Start and end spray time can be set randomly for each day
 - b. The spray interval (1 minute 4hours) can be set randomly
 - c. The working days (Monday Sunday) for the week can be set randomly
 - d. With power off, pressing the SPRAY button can set if the dispenser sprays or not; when setting not spray, the clock in the display keeps running
- 2. When switching ON the power, the dispenser will spray once and work as default setting. Default setting: 30 minutes spraying interval, daily working (Monday-Sunday), 24-Hour spraying time, and clock starts from 00:00.

PERFUME DISPENSER FUNCTION & USE INSTRUCTION

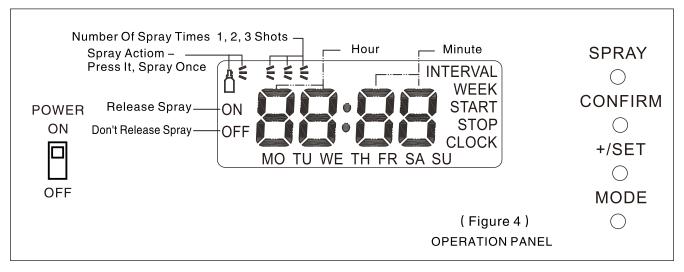

BUTTON	FUNCTION & INSTRUCTION
POWER	Power ON/OFF Power ON, the dispenser work as default setting auto matically, and it spray once. the LCD shows power OFF, all the settings are cleared. the LCD shows nothing.
SPRAY	Press once, OFF lights up which means the dispenser does not work, and the clock keeps running. The LCD shows Press twice, ON lights up which means the dispenser is working. In SETTING mode, the button is useless.
+/SET	In SETTING mode, press the button to adjust each option. Press for more than 2 seconds to fast adjust. In WORKING mode, the button is useless.
CONFIRM	In SETTING mode, after adjusting, press the button to confirm adjusting; press MODE button to cancel. In WORKING mode, the button is useless.
MODE	Press the button, the dispenser enters into SETTING mode: In SETTING mode, if not press MODE. +/SET, or CONFIRM button in 10 seconds, the dispenser will quit SETTING mode automatically. Press "MODE" Flashes, press +/SET to change to the required spray amount (1, 2, or 3 shots), after select, press CONFIRM. The dispenser will enter into spray interval setting automatically. INTERVAL shows, 00:30 flashes, press +/SET to select required spray interval (1, 2, 59 minutes or 1, 2, 3, 4 hours), after select, press CONFIRM. The dispenser will enter into spray day—MONDAY setting automatically. WEEK and MO show, ON flashes. Press +/SET to select ON or OFF, after select, press CONFIRM. The dispenser will enter into spray day—TUESDAY setting automatically.

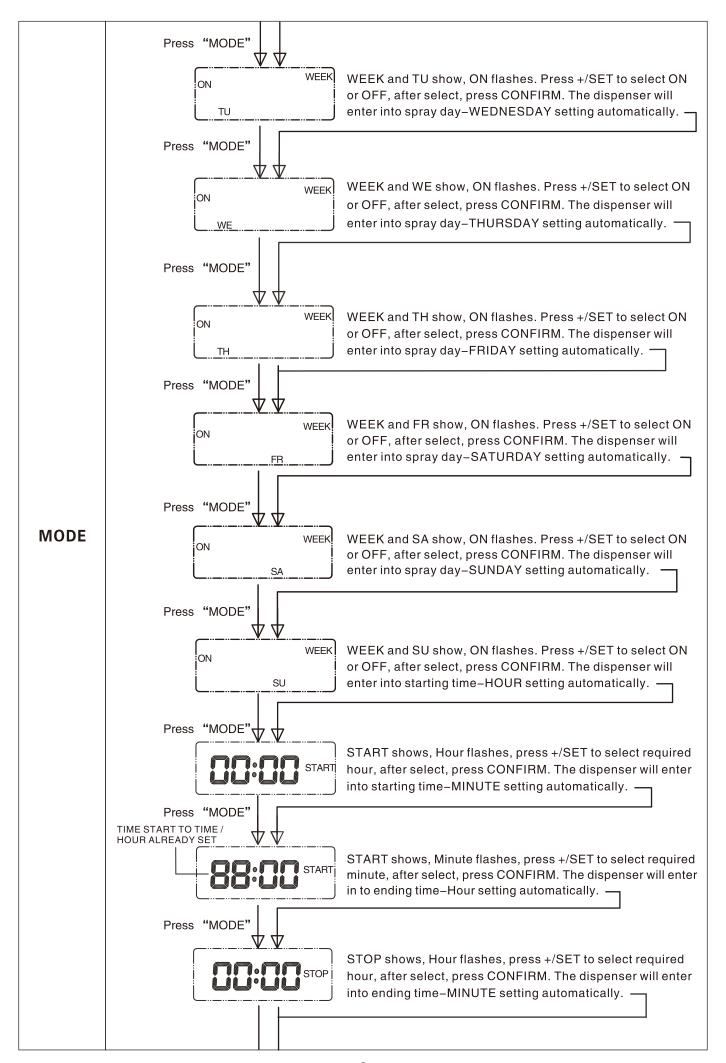

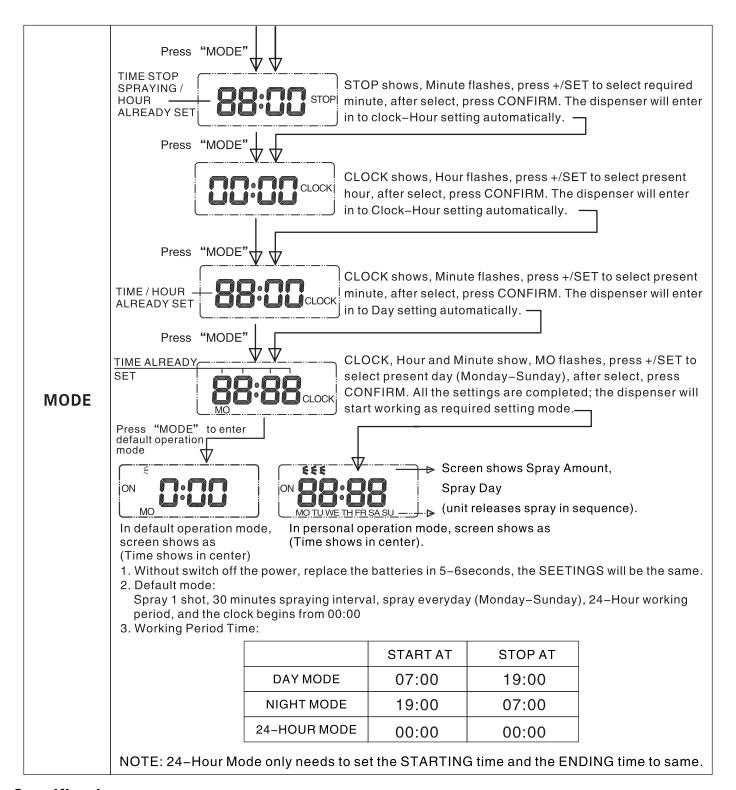

Specification:

Voltage: DC2 x 1.5V R20

Notes:

- 1. DO NOT face the spout inwards
- 2. DO NOT place in an environment which is over 50°C
- 3. DO NOT use any kinds of thinner and chemical solution to clean the surface.

Package:

One set of perfume dispenser

One copy of user manual

One copy of 1pc of key, 1pc of hook, 2pcs of screws, 2pcs of plugs