

BC950F

DOLPHIN TOUCH FREE FOAM SOAP DISPENSER

SPECIFICATION

- › Wall mounted automatic foam soap dispenser with vertically brushed satin stainless steel finish cover with low soap viewing slot and plastic backplate.
- › 0.9mm satin finish stainless steel grade 1.4301 (304)
- › Powered by 4 x AA (1.5v) Alkaline batteries (not included)
- › Fitted with low battery indicator:
- › 800ml capacity.
- › Delivery per activation: 0.6ml - 0.8ml
- › Fitted with anti-tamper key lock

WIDTH	108 MM
HEIGHT	268 MM
PROJECTION	107 MM

INSTALLATION (TILE OR DRY WALL)

- › Tape the installation template at the desired location on the mounting surface. 200mm minimum distance above counter top. Do not mount above a reflective surface, or where light is aimed from below at the sensor. This may cause continual activation of the sensor
- › Drill 4 holes Ø8 at marked locations
- › Remove the template and insert 4 wall plugs into the holes (fig.1)
- › Insert 2 screws (use suitable screws for the installation) into the top wall plugs, leaving 3mm gap between the wall and screw head, for hanging dispenser (fig.2 & fig.3)
- › Hang the dispenser on the 2 screws, through the keyhole slots on the backplate
- › Use the key (supplied) to unlock and pull forward the housing cover (fig.4)
- › Remove the soap tank and lock the dispenser to the wall with remaining 2 screws through the holes at the bottom of the backplate
- › Tighten all screws (fig.5)
- › Adhesive pads also provided – ensure unit properly fixed before filling with soap

OPERATION

- › Open housing with key supplied
- › Open battery compartment cover; remove battery box and unplug cable; install 4 new Alkaline Type AA 1.5V batteries ensuring that they are installed correctly (Observe the +/- indications)
- › Refit the cable to the battery box and reinstall in the battery compartment, then close the cover
- › Remove tank cover and fill soap tank with liquid foaming soap only, not pearlised lotion soap.
- › Refit tank cover ensuring that the air vent hole is open and nozzle is not clogged.
- › Ensure soap tank is clean with no over spill.
- › Make sure that the nozzle flange is below the housing cradle rib to stretch the valve tube.
- › Push the spout nozzle back into the cradle gate
- › Close the housing cover and lock it with the key supplied
- › The LED will be lit and flash 4 times. This indicates that the environment has been detected.
- › The default sensing distance is 80-100mm, if there is no object under the dispenser.
- › The sensor will detect the installation height and environment light and automatically set a suitable sensing distance, if there is an object (such as a basin or counter) under the dispenser.
- › To check that the soap dispenser is functioning correctly, place hand under the soap dispenser.

Low Battery Indication

- › With housing open and soap tank removed (see instructions) perform the following diagnostic test:
- › Press up and hold the cover safety interlock switch on the underside of the dispenser
- › The blue LED should be lit and then flash 4 times indicating proper operation “stand-by” condition and battery level is ok.
- › If the blue LED continues to flash, replace the batteries.
- › Estimated battery life 25,000 activations

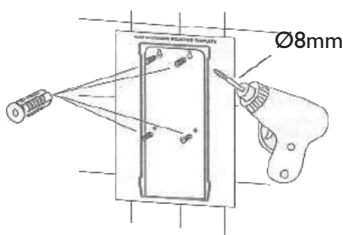


Fig. 1

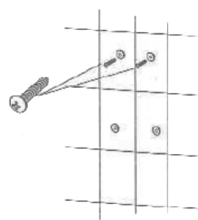


Fig. 2

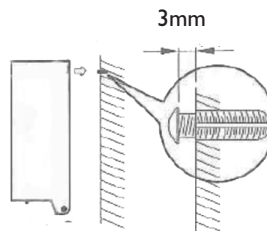


Fig. 3

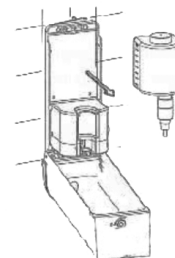


Fig. 4

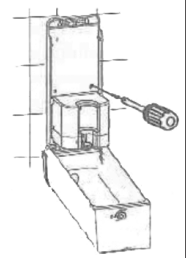


Fig. 5