

Prestige Soap Dispenser With Inner Pp Reservoir

PW884



Installation: Unlock dispenser and remove filling reservoir. Mark a hole through the top central fixing indicator on the wall 360mm above the countertop and drill hole then insert plug, mark two further fixing points 255mm below, drill and insert plugs. Secure the unit to wall using screws provided. The soap dispenser will sit 100mm above countertop.

Specification: Prestige Soap Dispenser With Inner Pp Reservoir, capacity 1000ml constructed from high quality stainless steel. Soap dispenser will dispense one shot of liquid soap equal to 1.5ml. Dispenses any commercially available soap. Not suitable for grit soap.

Prestige Radiators Ltd

Unit 2, North Point Business Park, Selby Road, Eggborough, DN14 0JT

The illustrations and descriptions herein are applicable to production as of the date of this Technical Data Sheet. We reserve the right to make changes and improvements to the design and dimensions.