




## INSTALLATION

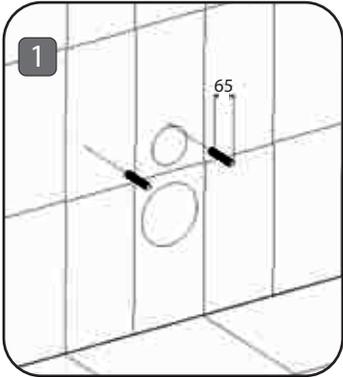

1. Prepare the waste and the fixing rods as shown in the picture and cut if necessary

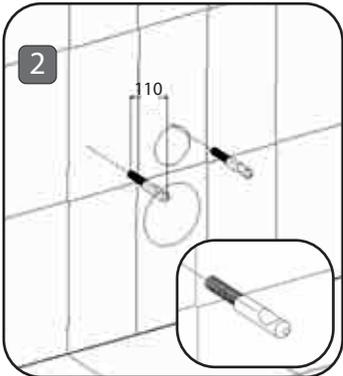

2. Screw on the two metal fixings on the threaded bar of the frame.  
**ATTENTION** It is very important to have the two countersunk depression upwards as shown in the picture

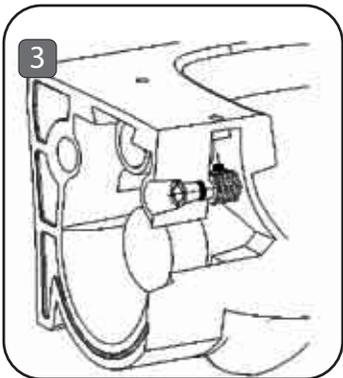

3. Mounting kits will be fitted as show in the picture



4. Then place the Pan onto the threaded bars and push it until flush to the wall, taking care of the connections which must be perfectly engaged to each other.



5. When you put the Pan on the threaded bars make sure that the fixings don't move and remain secure.



6. Adjust the Pan and secure it with the fixing nuts through the seat holes in the top of the Pan. An allen key is supplied.

