

Refurbishment Kits

For all Dolphin Prestige WP and DP Counter Mounted Dispensers

(Except WP 195)

Please read carefully before use



8 part refurbishment kit

part no. 924011




12 part refurbishment kit

part no. 924010




8 part refurbishment kit part no. 924011

Consisting of items: 03, 04 (Ø 4, 2mm),
06 (Ø15, 6mm), 07 (Ø14mm),
10, 11, 12 & 13

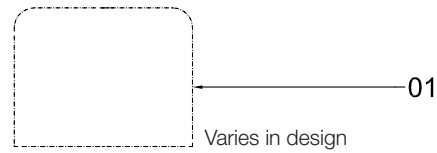


Instructions for refurbishment process:

1. Remove the complete pump assembly (items 1-15) from the soap dispenser.
2. Remove the hose (item 15) by pulling and unscrew and remove the hose nipple (Item 14).
3. Remove the push-button (item 1) and from the pump cylinder (item 5) and piston (item 9) by inserting a thin tool (screwdriver/Allen key - Ø max. 3mm) through the hole in the pump cylinder (see arrows).
4. Remove the spring (item 02), locating washer (item 03) and O-ring (item 04) from the pump cylinder.
5. Remove the piston assembly from the pump cylinder.
6. Remove the circlip (item 11) from the piston and pull off the piston head (item 10).
7. Pull out the sealing ring (item 12) and the DBV (item 13) from the hose nipple.
8. Now the pump is completely unassembled.
9. Before reassembling clean the pump cylinder and lightly grease, and clean the piston but DO NOT grease (it is important to have thread clean – even degrease if necessary)
10. Use this complete kit to replace all like for like items from the now unassembled unit with particular attention to the correct position of the O-rings (items 4, 6 and 7)
12. Reassemble the complete assembly in the reverse order of the above; we recommend using Loctite 243 on the threaded connection between the push button and piston only.

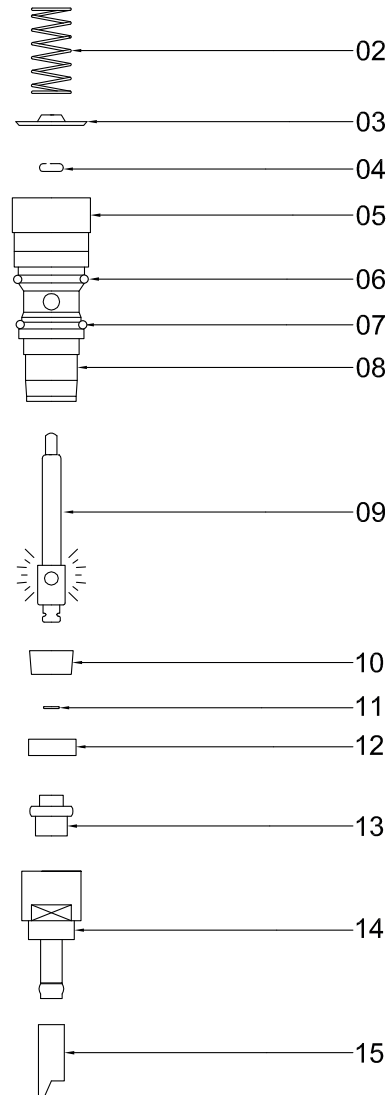


12 part refurbishment kit part no. 924010

Consisting of items 02, 03, 04 (Ø 4, 2mm), 06 (Ø15, 6mm), 07 (Ø14mm), 09, 10, 11, 12, 13, 14 & 15

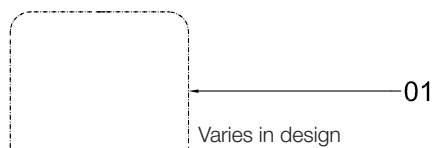

Instructions for refurbishment process:

1. Remove the complete pump assembly (items 1-15) from the soap dispenser.
2. Remove the hose (item 15) by pulling and unscrew and remove the hose nipple (item 14).
3. Remove the push-button (item 1) and from the pump cylinder (item 5) and piston (item 9) by inserting a thin tool (screwdriver/Allen key - Ø max. 3mm) through the hole in the pump cylinder (see arrows).
4. Remove the spring (item 02), locating washer (item 03) and O-ring (item 04) from the pump cylinder.
5. Remove the piston assembly from the pump cylinder.
6. Remove the circlip (item 11) from the piston and pull off the piston head (item 10).
7. Pull out the sealing ring (item 12) and the DBV (item 13) from the hose nipple.
8. Now the pump is completely unassembled.
9. Before reassembling clean the pump cylinder and lightly grease, and clean the piston but DO NOT grease (it is important to have thread clean – even degrease if necessary)
10. Use this complete kit to replace all like for like items from the now unassembled unit with particular attention to the correct position of the O-rings (items 4, 6 and 7)
11. Reassemble the complete assembly in the reverse order of the above; we recommend using Loctite 243 on the threaded connection between the push button and piston only.

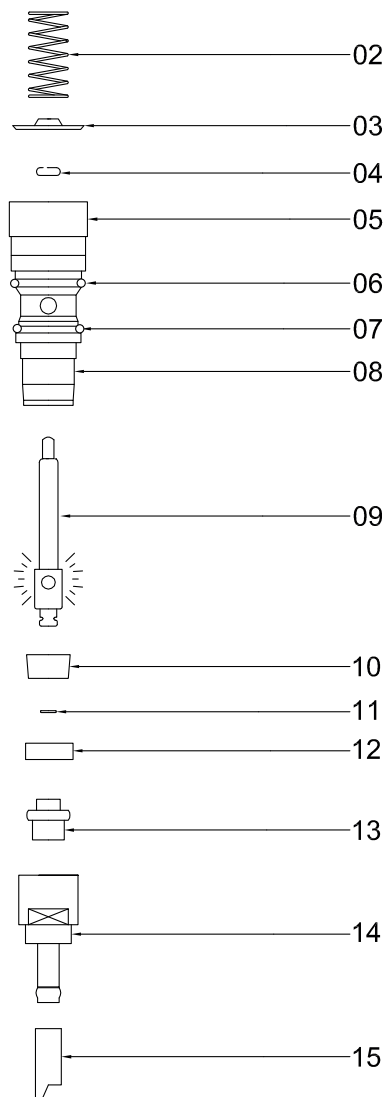

Mounting kit part no. 924026

