

CHANGING STATIONS **GW07 01 01 00 Horizontal baby changing station**



Product description

Baby changing station, with adjustable safety belt
Made of polyethylene
Colour white
Horizontal position

Technical specifications:

Horizontal baby changing station with adjustable safety belt. The product consists of a wall mount and a foldable baby changing station. The one-piece wall mount made of thermoplastic polyethylene includes on the bottom a hinge-like structure that is joined to the foldable baby changing station. The changing station is entirely made of thermoplastic polyethylene and it includes a locking mechanism on one of its sides. The adjustable safety belt is made of high-resistant nylon and it has an easy-to-use adjustable lock. The assembled set has a white textured finish that provides it an appropriate resistance to wear. The product is anchored to a brick wall by means of the wall mount, which is fastened using 4 wall plugs and 4 screws. The overall dimensions of the product are 390 x 871 x 446 mm, and its net weight is 7 kg. The baby changing station model is GW07 01 01 00, manufactured by GENWEC WASHROOM S.L. - Av. Joan Carles I, 46-48 - c.p: 08908 L'Hospitalet de Llobregat - Barcelona. www.genwec.com.

Technical characteristics

Product specifications

One-piece wall mount made of polypropylene
Foldable baby changing station made of polypropylene
Adjustable safety belt made of nylon
Thermoplastic parts with a textured finish
Colour white
Maximum static force borne: 113 Kg (1)


(1) *The weight borne depends on the type of wall and the assembly chosen, provided it is attached properly.*

Packaging specifications

- Type of individual package: Individual cardboard box
- Dimensions of individual package: 900 x 460 x 110 mm
- Weight of individual package: 7.7 Kg
- Product dimensions: 390 x 871 x 446 mm (open)
- Product net weight: 7 Kg
- Units per box: 1
- Units per pallet: 20 (*)

(*) Height of the pallet below 1.1 m.

CHANGING STATIONS **GW07 01 01 00** Horizontal baby changing station

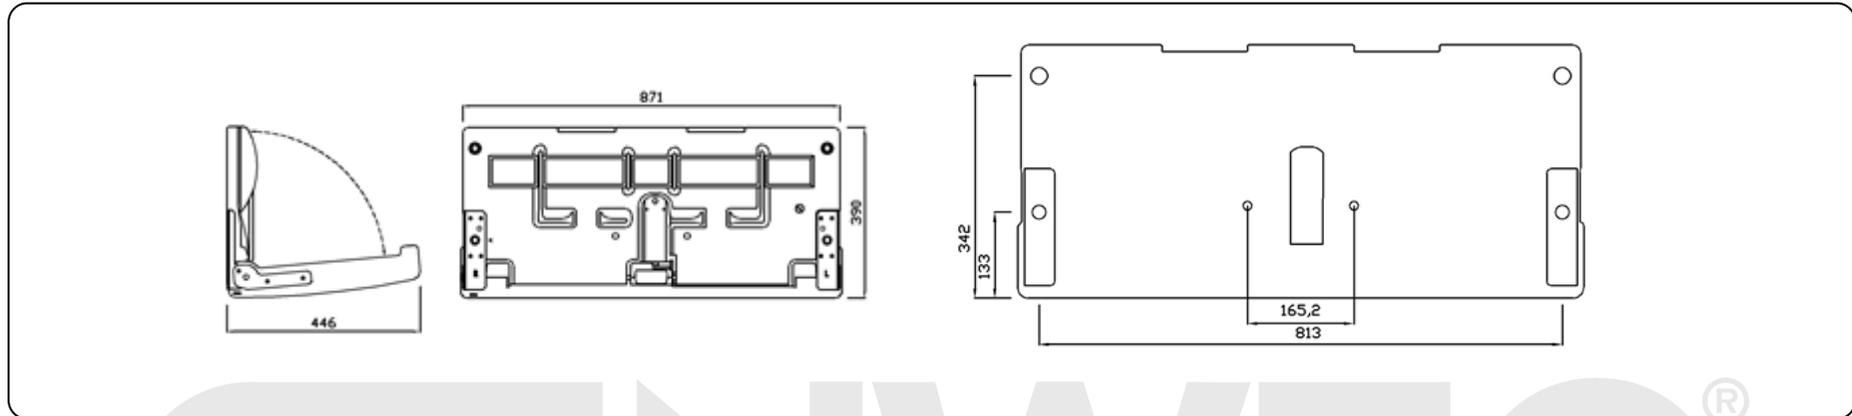

Cleaning: A cotton cloth slightly dampened in a soapy solution is recommended. Then dry off. Do not use any strong chemicals or cleaning agents that can be dangerous to children.

Maintenance: Inspect all the fittings and components on a monthly basis to make sure that all the fittings are fastened appropriately and that there are no faulty or damaged components. Stop using the product if any components are missing or damaged.

WASHROOM EQUIPMENT & COMP.